

Default Parameters

The scanner can be reset using one of two default settings: factory defaults or custom defaults. Scan the appropriate bar code(s) below to reset the scanner to its default settings and/or set the scanner's current settings as the custom default.

Set Factory Defaults — Scan the Set Factory Defaults bar code below to eliminate all custom default values and return the scanner to factory default values. (For factory default values, see [Appendix B, Standard Defaults](#).)

Write to Custom Defaults — Custom default parameters can be configured to set unique default values for all parameters. After changing all parameters to the desired default values, scan the Write to Custom Defaults bar code below to configure custom defaults.

Restore Defaults

Resets all default parameters as follows:

- If custom default values were configured (see [Write to Custom Defaults](#) above), the custom default values are set for all parameters each time the Restore Defaults bar code below is scanned.
- If no custom default values were configured, the factory default values are set for all parameters each time the Restore Defaults bar code below is scanned. (For factory default values, see [Appendix B, Standard Defaults](#).)



Set Factory Defaults



Write to Custom Defaults

1



*Restore Defaults

Table 16. USB Defaults

| Parameter | Default | Page Number |
|--|------------------------|-------------|
| USB Host Parameters | | |
| USB Device Type | HID Keyboard Emulation | 77 |
| USB Country Keyboard Types (Country Codes) | North American | 78 |
| USB Keystroke Delay | No Delay | 80 |
| USB CAPS Lock Override | Disable | 80 |
| USB Ignore Unknown Characters | Send | 81 |
| Emulate Keypad | Disable | 81 |
| USB FN1 Substitution | Disable | 82 |
| Function Key Mapping | Disable | 82 |
| Simulated Caps Lock | Disable | 83 |
| Convert Case | No Case Conversion | 83 |

USB Host Parameters

USB Device Type

Select the desired USB device type.



When changing USB Device Types, the scanner automatically restarts. The scanner issues the standard startup beep sequences.

NOTE

2



*USB Keyboard



USB OEM Table Top

USB Country Keyboard Types (Country Codes continued)



French Canadian Windows 2000/XP



Spanish Windows

3



Italian Windows



Swedish Windows



UK English Windows



Japanese Windows (ASCII)



Portuguese-Brazilian Windows